

Accessing the N7TGB IRLP/Echolink Node on the N7PLQ Repeater

Frequency: 440.025 Mhz
PL: 123.0

IRLP user access prefix	01
Echolink user access prefix	##
Plays time & ID	1
Node connection status	1#

In order to access the IRLP node you must use the prefix followed by the node number, unkeying your radio only after the entire sequence of digits is entered. For example, to connect to reflector 920 channel 2, you would key your radio, enter 019202, then unkey. If successful, you will hear the connect message after a pause.

To disconnect from a node, enter 73.

To connect to an Echolink node, follow the same procedure, but use the prefix ##.

73 will disconnect you from an Echolink node.

Note: This system is half duplex, so in order for the node to hear your DTMF tones you must wait until there is a break, when no one is transmitting!

If you have any problems, ask for myself, or any control operator.

Please do not discuss any codes (except for node numbers) over the air for any reason. Please do not give the codes out, just ask them to contact me and I'll be happy to send them this sheet.