

Accessing the N7TGB IRLP Simplex Node 3064

Frequency: 147.440mhz
PL: 123.0

Access prefix: **01**
Plays time and ID: **1**
Node connection Status: **1#**

In order to access the IRLP node you must use the prefix followed by the node number, unkeying your radio only after the entire sequence of digits is entered. For example, to connect to reflector 920 channel 2, you would key your radio, enter **019202**, then unkey. If successful, you will hear the connect message after a pause.

To disconnect from a node, enter **73**.

This is a simplex node located in Sun Valley, NV, north of Reno. It also covers part of the Reno-Sparks area.

Note: This system is half duplex, so in order for the node to hear your DTMF tones you must wait until there is a break, when no one is transmitting!

If you have any problems, ask for myself, or a control operator.

Please do not discuss any codes (except for node numbers) over the air for any reason. Please do not give the codes out, just ask them to contact me or give them my web site url.